

**This kit includes:**



- 2x trolleys (1 furniture trolley, 1 dolly)
- 4x speakers (2 in box, 2 in case on wheels with handle)



- 2x speaker stands (in carry bag)



- 1x subwoofer (in box)



- 1x Smartbox (For playing DVD, in hard case)

- Remote controls for projector and DVD player



- 1x projector (in hard case)

- Microphone and cord



- Screen and tarp in carry bag

- Bag of cables and cords (cloth bag with zip)



- 4x sandbags

- Narrow bag with tethers, pegs and mallet



- 1x air pump

- Foldable benches x 2 (to sit projector and Smartbox equipment on)

**This kit does not include (YOU SUPPLY):**

- Powerboards (1+ suggested)
- Extension cords (4+ suggested)

**Please ensure you pick up all equipment as you will be responsible for the entire kit during the hire period.**



**Tether pack includes:**

- Large pegs x4
- Small tent pegs x9
- Tethers x8 (wound up with rubber band)
- Mallet x1
- Carry bag







## Speaker set up:

- Follow this diagram to correctly connect speakers approximately 3 meters from screen (low table is best eg. coffee table)
- Each colour also corresponds to the coloured cable ties on the cables to make things easier
- Turn volume on speakers DOWN before testing



- Follow the labels on the projector to connect it to the system

- = Power  
(5 outlets total required via power board or wall outlet including pump for screen inflation)
- All power cables are the same and can fit into any device in the system



Some of the cable connectors feature release clips. Please ensure clips are squeezed or pulled before trying to remove cables to avoid damage.





### Screen set up:

1. **IMPORTANT:** Check height clearance of 4 meters before set up
2. Roll out the blue tarp
3. Roll out the screen on the blue tarp, the tube arm should be at the back of the screen and the screen should face up.
4. Attach the white screen overlay (4 zips)
5. Zip the deflation panels up x3 (one on each side and one at the top) and secure the Velcro over the zips
6. Attach the tether ropes to the metal D-rings and secure into the ground using the pegs and mallet
7. Tightly attached the inflation tube to the pump using the Velcro strap
8. As screen is inflating ensure tube is not twisted. If any issues, stop the inflation immediately and fix before continuing
9. The pump stays on for continual inflation of the screen

### Screen pack down:

1. Ensure clearance around screen before deflation
2. Turn off the inflation pump
3. Guide the screen down and unzip side deflation zips (unzipping top zip is optional)
4. Lay the screen flat and remove the white screen overlay (4 zips) and fold neatly
5. Flatten the screen as neatly as possible then fold in half (longways) and half again
6. Begin from one side and tightly roll the screen up. It's now ready to be put into its case. If rolled correctly you should also be able to fit the folded white screen and tarp in the case also.



**Please ensure all tethers are rolled up with a rubber band**

### Tether pack includes:

- Large pegs x4
- Small tent pegs x9
- Tethers x8 (wound up with rubber band)
- Mallet x1
- Carry bag

**NB:** Projector set up is only about 2 meters away from screen, so low benches are provided for you to sit the projector and Smartbox on. One bench is sufficient, but two are provided for you.